

Model #

2074AFCAF

 
2074AFGAC

73"W McKenzie Center Channel Console

AFCAF = Caffè finish

AFGAC = Glazed Antique Cherry finish

Assembly Instructions

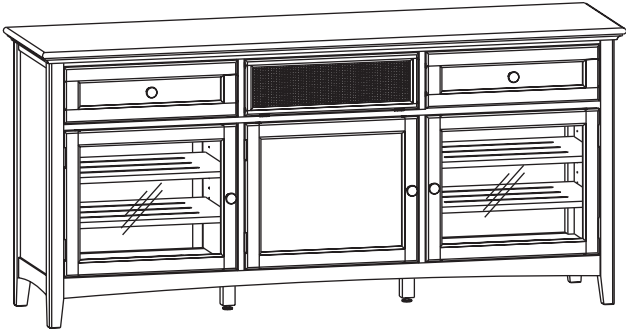

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

! WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

Correctly installing tipping restraints can reduce but does not eliminate tip-over risk.



IMPORTANT NOTES:

- For normal household use only. **Not** recommended to use this product in a commercial setting.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload drawers or shelves on this unit.
- Handle the glass plates with care. Glass is fragile.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.
- This Assembly requires two people.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



CALL US FIRST! *Do not return this item to the store.*

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, contact the Whittier Wood Product customer service department by phone, fax, mail or email.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Provide the furniture model number and finish (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

Production Code:

VN

08/11




 

 
 


 














**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

2074AFGACa; 2074AFCAF a 73"W McKenzie Center Channel Console — Parts List

 Please identify the parts and check that quantities received match those on this list.




 




 


 










If you need to replace a part, refer to the following letter and model name.

Part	Description	Quantity
A	Top Assembly (attached) 	1
B	Adjustable Shelf 	4
C	Center Adjustable Shelf 	2
D	Case only 	1
E	Removable Back (installed) 	2
F	Glass Door Frame (installed) 	2
G	Center Door (installed) 	1
Ha	Speaker Door (attached) 	1
I	Door Glass (installed) 	2
J	Drawer Box (installed) 	2
K	Drawer Face (installed) 	2
L	Door Glass Support Rail (attached) 	4
M	Door Glass Support Stile (attached) 	4
N	Shelf Bracket (attached) 	24
O	#6 x 1/2" Undercut Screw (inserted) 	24
Q	Butler Hinge (attached) 	2
R	Magnetic Push Lock (attached) 	2
S	#5 x 5/8" Flat Head Screw (inserted) 	12 (AFGAC) 0 (AFCAF)
T	Magnetic Plate (attached) 	8
U	#6 x 5/8" Undercut Screw (inserted) 	16 (AFGAC) 64 (AFCAF)
V	Magnetic Catch (installed) 	6
W	#6 x 5/8" Philtruss Screw (inserted) 	42
X	Hinge (attached) 	6
Y	#6 x 5/8" Flat Head Screw (inserted) 	36 (AFGAC) 0 (AFCAF)

2074AFGACa; 2074AFCAFfa 73"W McKenzie Center Channel Console

— Parts List continued

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and model name.

ZA	Drawer Slides (installed) 	2
ZB	#6 x 3/4" Philtruss Screw (inserted) 	12
ZC	#6 x 1/2" Philtruss Screw (inserted) 	16
ZD	Assembled Foot (attached) 	2
ZG	Small Adjustable Glide (installed) 	6
ZH	#8 x 2" Black Screw (inserted) 	4
ZI	Knob (attached) 	5
ZJ	#8 x 1-1/2" Machine Screw (installed) 	5
ZK	Drawer Stop (attached) 	4
ZL	Turn Button (attached) 	8
ZM	#6 x 3/4" Brass Flat Head Screw (inserted) 	30
ZN	#8 x 1-1/4" Pan Head Screw (inserted) 	24
ZO	#8 x 1-3/16" Pan Head Screw (inserted) 	6
ZP	#8 x 1-1/4" Black Screw (inserted) 	18
ZQ	#8 x 1-5/8" Black Screw (inserted) 	10
ZS	Flat Washer (inserted) 	2
ZT	Fitted Back (attached) 	1
ZU	Chain (attached) 	2
ZV	#8 x 7/8" LoProfile Screw (inserted) 	12
ZW	#8 x 1-1/8" LoProfile Screw (inserted) 	8
ZX	3mm x 12mm Pan Head Screw (inserted) 	4
ZY	Insert Nut (inserted) 	6
TR	Tipping Restraint	2 sets


2074AFGACa; 2074AFCAFfa 73"W McKenzie Center Channel Console Assembly Instructions

Tool Required: Phillips Screwdriver, Padded Hammer




1. Place the console at its final destination. Rotate the Small Adjustable Glides (ZG) found at the bottoms of the legs and of the two Assembled Feet (ZD) until the unit is level. See Figure 2.

 Fig. 2

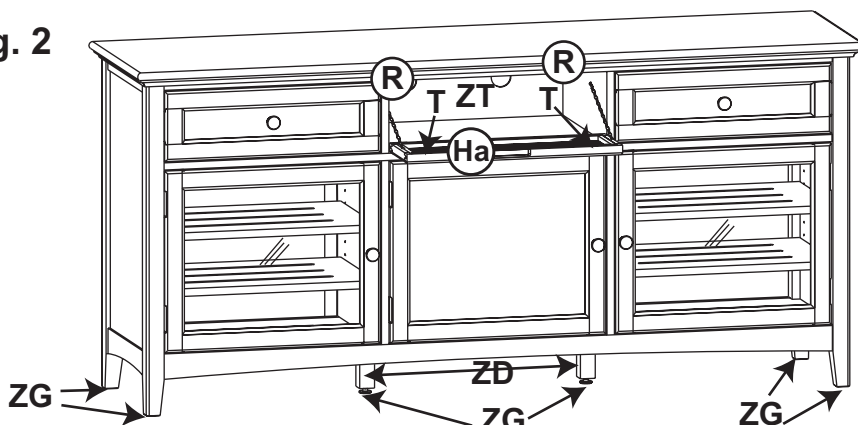


2. To open the Speaker Door (Ha), press both corners until the magnets release. Gently grasp the finger groove in the top middle of the door and pull open. To shut the door, push gently but firmly on the Speaker Door until the Magnetic Plates (T) make secure contact with the Magnetic Push Locks (R). See Figure 3.

 
If you need to install your speaker from the back, remove the 18 #6 x 5/8" Philtruss Screws (W) and pull away the Fitted Back (ZT). After installing the component, replace the Fitted Back and attach using the 18 #6 x 5/8" Philtruss Screws (W).

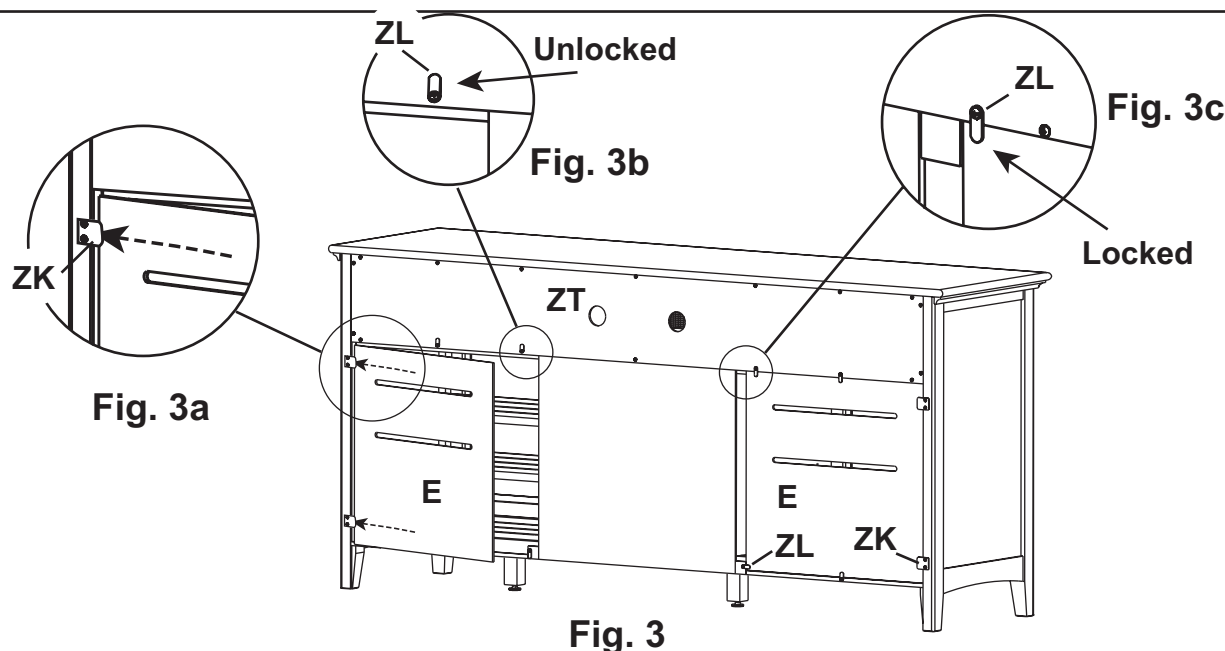

 3. To insert your media components and access wires more easily, you may want to remove the Removable Backs (E). To do so, unlock the Turn Buttons (ZL) as shown in Figures 3 and 3b. Slide the Backs away and place them off to the side. After installing your components, slide the Backs (E) behind the Drawer Stops (ZK) and lock the Turn Buttons (ZL). See Figures 3, 3a, 3b, 3c.

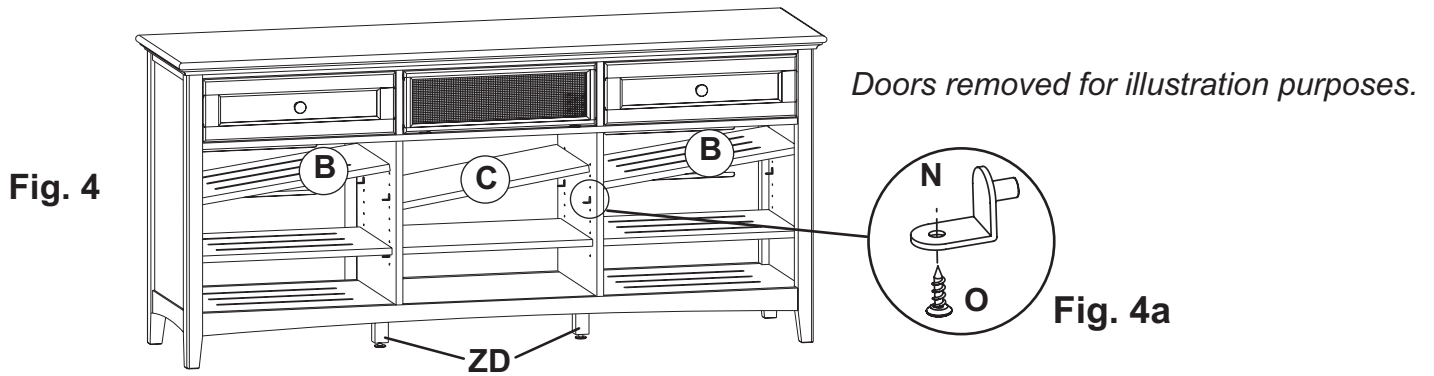

 - To move the Adjustable Shelves (B, C), remove the #6 x 1/2" Undercut Screws (O) and the Shelf (B, C). Position the Shelf Brackets (N) to the desired locations, replace the shelf and insert the screws. See Figures 4 and 4a.

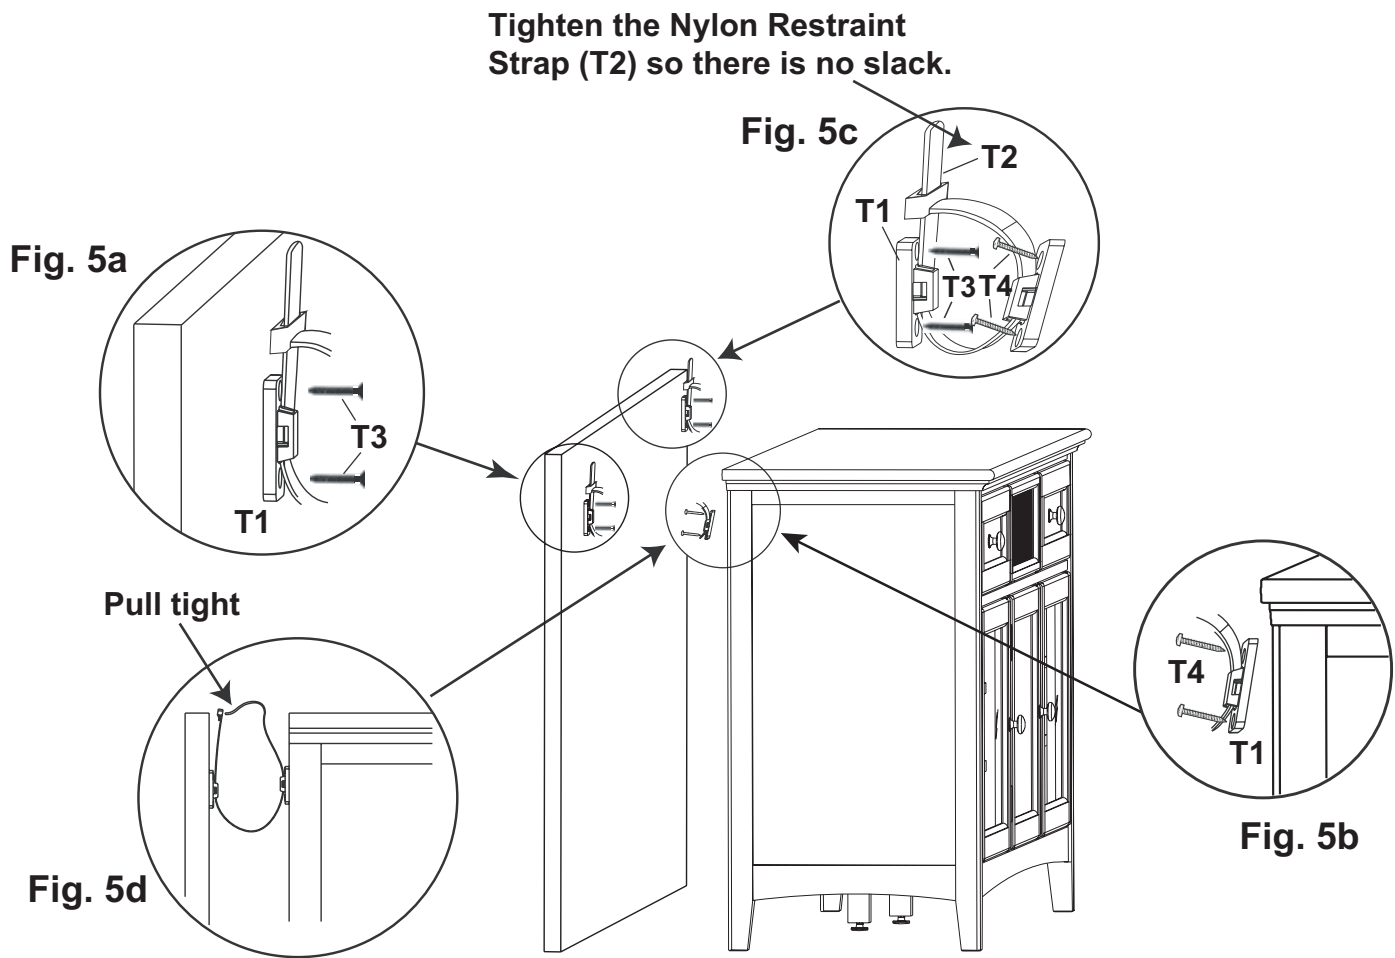

Tipping restraint:

- Locate two studs in the wall behind the unit. Attach a Clip (T1) to one wall stud with two #8 x 2" Black Screws (T3). See Figure 5a. Attach a second clip to the unit with two #8 x 1" Pan Head Screws (T4). See Figure 5b. Connect the two clips with the Nylon Restraint Strap (T2). **Pull the Nylon Restraint Strap (T2) tight so there is no slack.** See Figures 5c and 5d. Repeat this procedure to attach the second tipping restraint. If you cannot locate two studs, purchase the proper wall attachment hardware for your type of wall and secure the unit.