

Model #


# 2091AFGSPa 2091AFCAFa

## 64"W Pacific Sound Bar Console

*AFGSP = Glazed Spice finish*

*AFCAF = Caffè finish*

*Assembly Instructions*

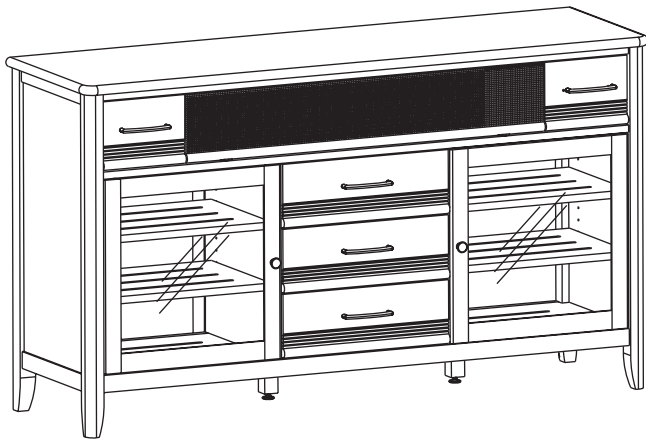

### **Congratulations!**

*This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.*

## **! WARNING**

**Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:**

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

**Correctly installing tipping restraints may reduce but will not eliminate the risk of tip-over.**



### **IMPORTANT NOTES:**

- For normal household use only. **Not** recommended for commercial use.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the drawers or shelves.
- Handle the glass plates with care. Glass is fragile.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.
- This assembly requires two people.

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**



**CALL US FIRST! Do not return this item to the store.**

**Service Policy:** We will replace any part that is defective, missing or damaged during assembly. For a replacement part, contact Whittier Wood Products customer service department by phone, fax, mail or email.

**Hours:** Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

**To Order:** Provide the finish and furniture model number (upper left corner of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

*Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.*

**800-653-3336** • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060  
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.



P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:

VN

 

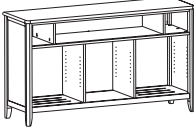
 
 

















 

10/11

# 2091AFGSPa; 2091AFCAFa

## 64"W Pacific Sound Bar Console — Parts List

Please identify the parts and check that quantities received match those on this list.


 
 




 








 



 






If you need to replace a part, refer to the following letter and model number.

Part	Description	Quantity
A	Top (attached) 	1
B	Adjustable Shelf (attached) 	4
Ca	Case 	1
D	Removable Back (installed) 	2
E	Door Frame (installed) 	2
F	Door Glass (installed) 	2
Ga	Speaker Door (attached) 	1
H	Small Drawer Box (installed) 	2
I	Small Drawer Face (installed) 	2
J	Large Drawer Box (installed) 	3
K	Large Drawer Face (installed) 	3
L	Glass Retainer (inserted) 	1
M	Shelf Bracket (attached) 	16
N	#6 x 1/2" Undercut Screw (inserted) 	16
P	Butler Hinge (attached) 	2
Q	Magnetic Push Lock (attached) 	2
R	#5 x 5/8" Flat Head Screw (inserted) 	12 (AFGSP) 0 (AFCAF)
S	Magnetic Plate (attached) 	2
T	#6 x 5/8" Undercut Screw (inserted) 	4 (AFGSP) 16 (AFCAF)
U	Drawer Slides (installed) 	5 sets
V	#6 x 3/4" Philtruss Screw (inserted) 	30
W	#6 x 1/2" Philtruss Screw (inserted) 	34
X	Assembled Foot (attached) 	2
ZB	Small Adjustable Glide (installed) 	6

# 2091AFGSPa; 2091AFCAFa

## 64"W Pacific Sound Bar Console — Parts List continued

Please identify the parts and check that quantities received match those on this list.  
If you need to replace a part, refer to the following letter and model number.

ZC	#8 x 2" Black Screw (inserted) 	4
ZD	Hinge (attached) 	4
ZE	Hinge Plate (attached) 	4
ZF	#6 x 3/4" P.O. Screw 	16
ZG	Knob (attached) 	2
ZH	#8 x 1-1/4" Machine Screw (installed) 	2
ZI	Handle (attached) 	5
ZK	Drawer Stop (attached) 	4
ZL	Turn Button (attached) 	8
ZM	#6 x 5/8" Philtruss Screw (inserted) 	30
ZN	#8 x 1-1/4" Pan Head Screw (inserted) 	34
ZO	#8 x 1-3/16" Pan Head Screw (inserted) 	6
ZP	#8 x 1-1/4" Black Screw (inserted) 	35
ZQ	#8 x 1" LoProfile Screw (inserted) 	20
ZR	Flat Washer (inserted) 	2
ZS	Hex Bumper (attached) 	2
ZT	Fitted Back (attached) 	1
ZU	Speaker Spacer 	2
ZV	Pad Strip (attached) 	4
ZW	Chain (attached) 	2
ZX	Cleat (attached) 	1
ZY	Push Plate 	2
ZZ	1/2" Dark Antique Brad 	4
YA	#8 x 1-1/8" LoProfile Screw (inserted) 	8
YB	3mm x 12mm Pan Head Screw (inserted) 	4
YC	Insert Nut (inserted) 	6
YD	#8 x 1-5/8" Machine Screw (installed) 	10
TR	Tipping Restraint	2 sets



# 2091AFGSPa; 2091AFCAFa 64"W Pacific Sound Bar Console Assembly Instructions

**Tool Required:** Phillips Screwdriver, Hammer



1. Place the console at its final destination. Rotate the Small Adjustable Glides (ZB) on the bottoms of the legs until the unit is level. See Figure 3.


**Step two is optional:** Attach the Push Plates (ZY) when the console will be placed in a high-use area such as a retail sales floor where the Sound Bar Speaker Door will be opened and closed often.

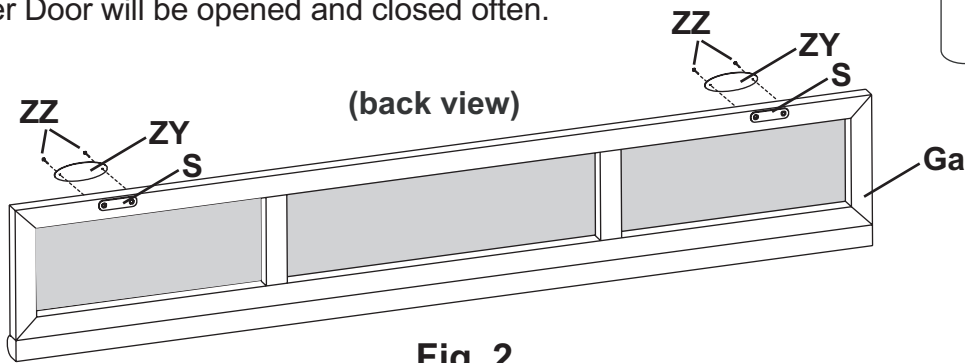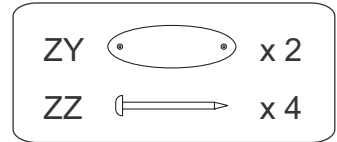

**Fig. 2**

2. Remove the Speaker Door (Ga) and place it face-up on a clean protected surface. Center a Push Plate (ZY) over the right Magnetic Plate (S) and attach with two 1/2" Dark Antique Brads (ZZ). Repeat for the left side. See Figure 2. Attach the Door.

**Fig. 3**

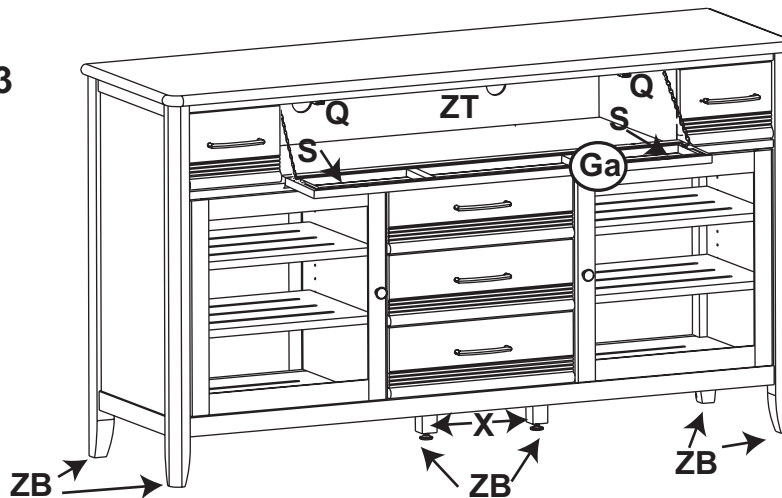


3. To open the Speaker Door (Ga), simultaneously press the Push Plates or both corners until the magnets release. Gently grasp the middle of the door and pull it open. To shut the door, push gently but firmly on the Speaker Door (Ga) until the two Magnetic Plates (S) make secure contact with the Magnetic Push Locks (Q).


If you did not install the Push Plates, gently press on both corners until the magnets release. See Figure 3.

If you need to install your sound bar from the back, remove the #6 x 1/2" Philtruss Screws (W) and pull away the fitted back (ZT). After installing the component, replace the Fitted Back and attach with the #6 x 1/2" Philtruss Screws.


**Fig. 4**

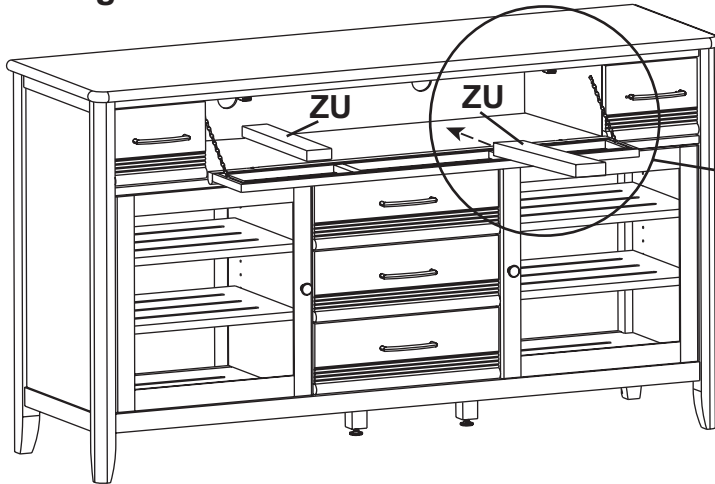


**Fig. 4a**

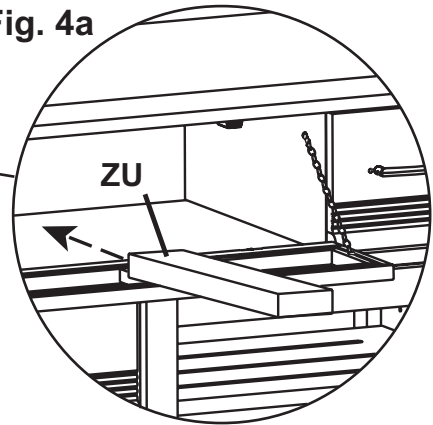

4. If your center sound bar needs to sit above the edge of the speaker door, place the two Speaker Spacers (ZK) into the sound compartment so the Pad Strips (ZL) face down. Place the speaker on top of the Spacers. See Figures 4 and 4a.

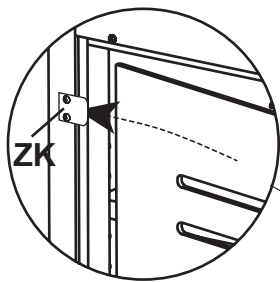

**Fig. 5a**

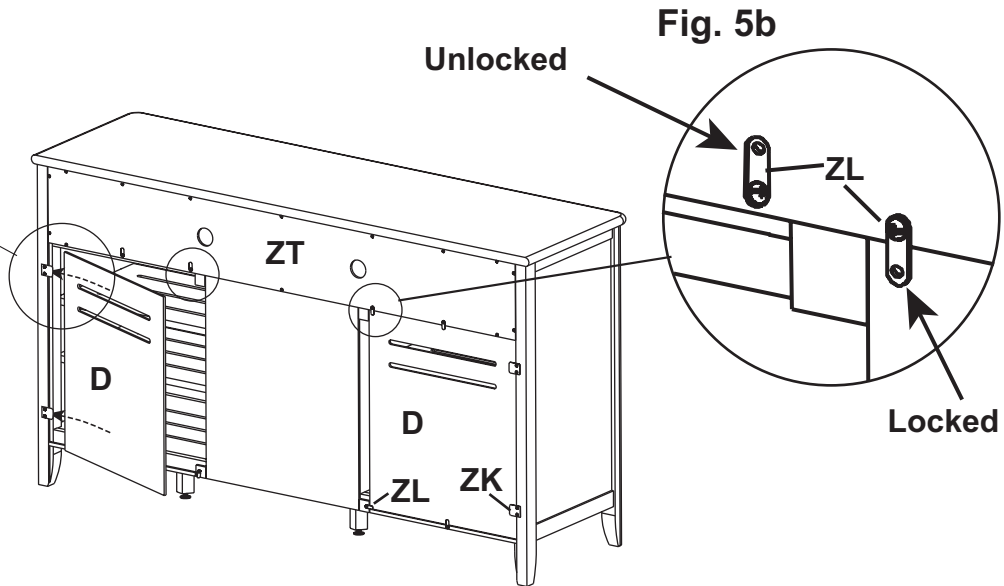

**Fig. 5**

5. To insert your media components and access wires into the console more easily, you may want to remove the Removable Backs (D). To do so, unlock the Turn Buttons (ZL) as shown in Figures 5 and 5b. Slide the Backs away and place them off to the side. To put them back into place, slide the Backs behind the Drawer Stops (ZK) and position the Turn Buttons so that they are locked. See Figures 5a and 5b.

Doors removed for illustration purposes.

Fig. 6

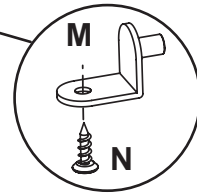
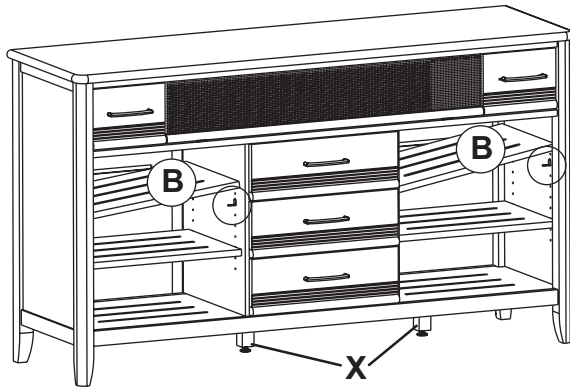


Fig. 6a

- Determine where you want to place the Adjustable Shelves (B). To support each shelf, tap the Shelf Brackets (M) into the four holes with the flat side down. Insert the shelf as shown in Figure 6. You may fasten the brackets to the shelf by inserting a #6 x 1/2" Undercut Screw (C). Repeat for each shelf. See Figure 6a.

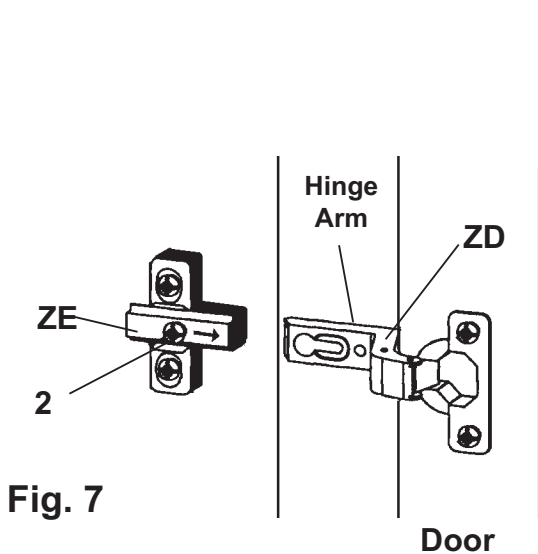


Fig. 7

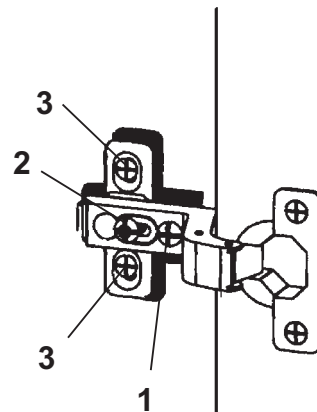


Fig. 7a

**Side adjustment 4mm (5/32")**

To move the door towards the side panel, loosen screw '1' and tighten screw '2'. To move the door away from the side panel, loosen screw '2' and tighten screw '1'.


**Depth Adjustment 4mm (5/32")**

Loosen screw '2' (just one turn), adjust the door to the desired position and re-tighten the screw.

**Height Adjustment 4mm (5/32")**

Loosen screw '3', adjust the door to the desired position and re-tighten the screw.

- If you need to adjust the doors, follow the above instructions.

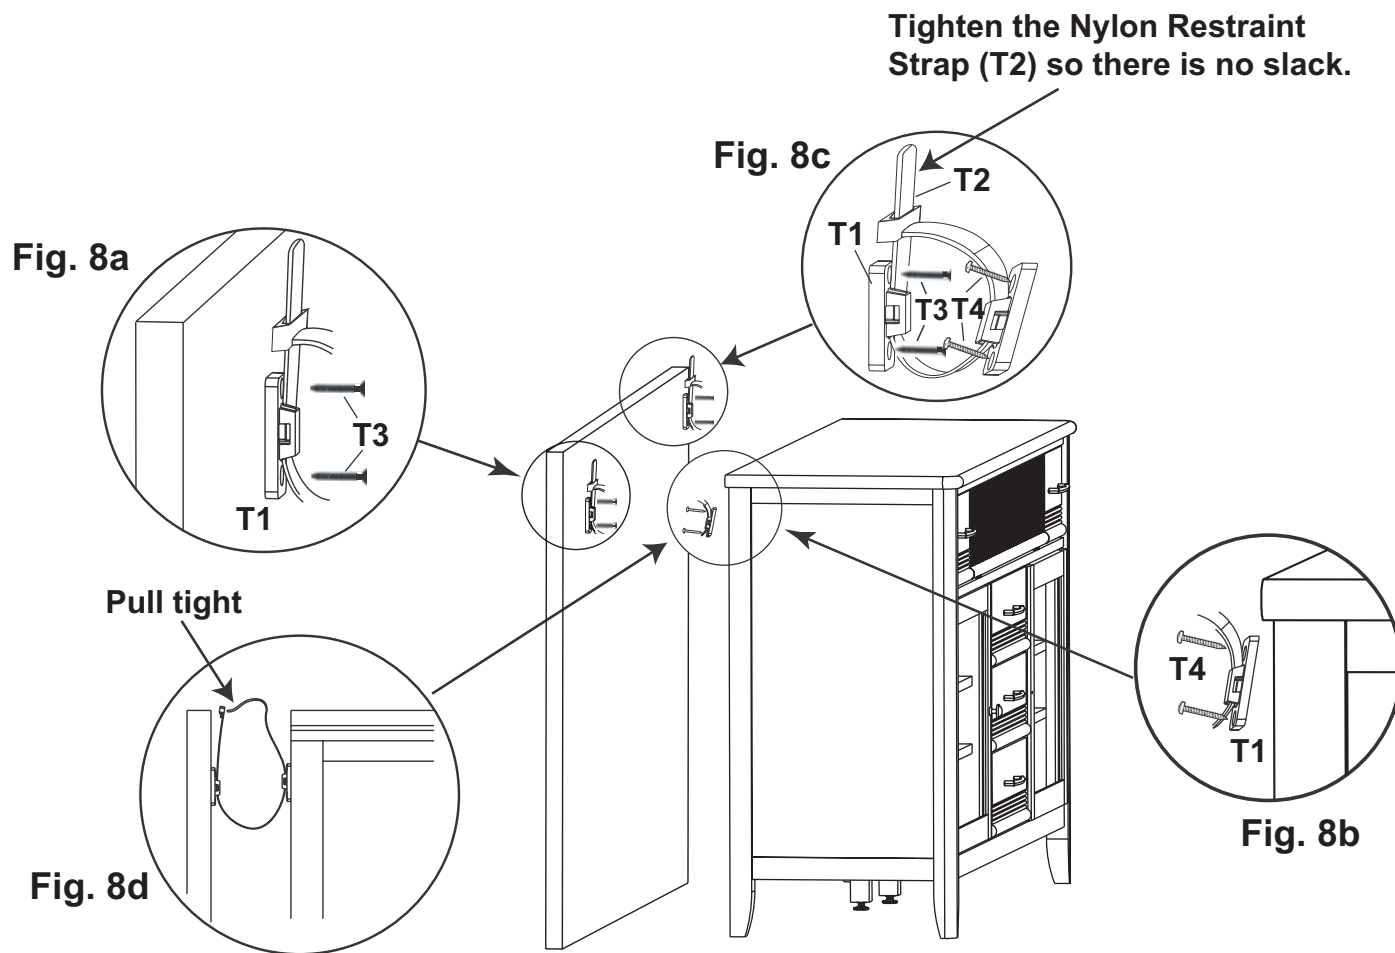

### Tipping restraint:

8. Position the unit at the desired location. Locate two studs in the wall behind the unit. Attach a Clip (T1) to one wall stud with two #8 x 2" Black Screws (T3). See Figure 8a. Attach a second clip to the unit with two #8 x 1" Pan head Screws (T4). See Figure 8b. Connect the two clips with the Nylon Restraint Strap (T2). Pull the Nylon Restraint Strap (T2) tight so there is no slack. See Figures 8c and 8d. Repeat this procedure to attach the second tipping restraint. If you cannot locate two studs, purchase the proper wall attachment hardware for your type of wall and secure the unit.