

Model #

7401GDRC

Northgate 3-Drawer Media Chest

Glazed Dark Chestnut finish

Assembly Instructions



Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended to use in a commercial setting.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the drawers.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.

! WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

Properly installing tip-over restraints may reduce but does not eliminate the risk of tip-over.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE



CALL US FIRST! Do not return this item to the store

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, contact Whittier Wood Products customer service department by phone, fax, mail or email.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Provide the furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:


 



 
 










 
 
 
 


VN

08/11

7401GDRC Northgate 3-Drawer Media Chest

Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

Part	Description		Quantity
A	Top Assembly		1
B	Case		1
C	Removable Back		1
D	Cleat (attached)		1
E	Small Drawer Box (inserted)		1
F	Medium Drawer Box (inserted)		1
G	Large Drawer Box (inserted)		1
H	Small Drawer Face (installed)		1
I	Medium Drawer Face (installed)		1
J	Large Drawer Face (installed)		1
K	Insert Nut (inserted)		4
L	Small Adjustable Glide (installed)		4
M	Pull (attached)		6
N	M4 x 25mm Machine Screw (installed)		12
O	Drawer Slides (pre-installed sets)		3
P	#6 x 1/2" Philtruss Screw (inserted)		18
Q	#6 x 3/4" Philtruss Screw (inserted)		18
R	#8 x 1" Lo-Profile Screw (inserted)		24
S	#8 x 1" Pan Head Screw (inserted)		4
T	#8 x 1-1/4" Pan Head Screw (inserted)		26
U	Drawer Stop (attached)		3
V	Turn Button (attached)		3
W	#6 x 5/8" Philtruss Screw (inserted)		9
TR	Furniture Tipping Restraint		2 sets

7401GDRC Northgate 3-Drawer Media Chest

Assembly Instructions

Tools Required: Phillips Screwdriver

1. Place the chest at its final destination. Rotate the Small Adjustable Glides (L) on the bottoms of the legs until the unit is level. See Figure 1.

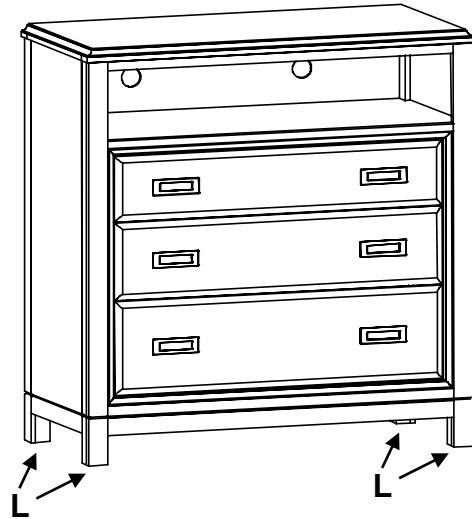


Fig. 1

2. To insert your media components and access wires easily, detach the Removable Back (C). To do so, unlock the Turn Buttons (V) as shown in Figures 2b and 2c. Slide the Back away and place it off to the side. See Figure 2a. To put it back into place, slide the Back and position the Turn Buttons so that they are locked. See Figures 2, 2a and 2b.

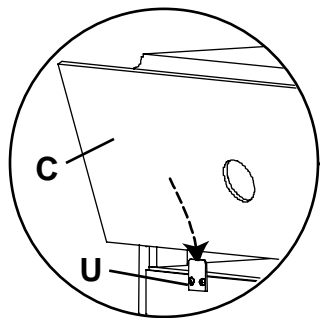


Fig. 2a

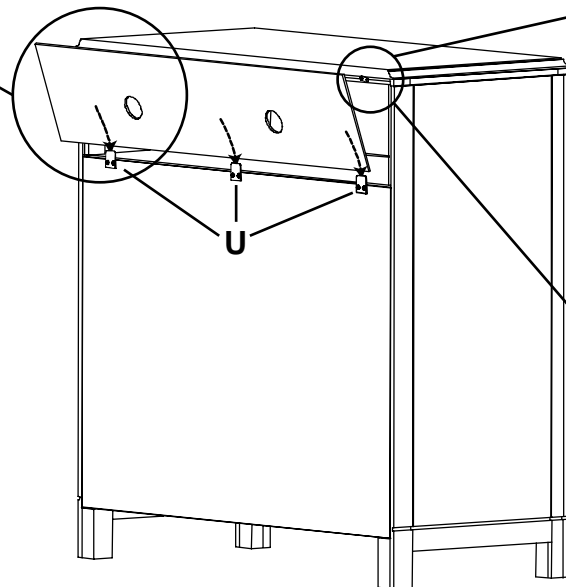


Fig. 2

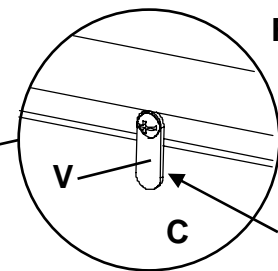


Fig. 2b

Locked

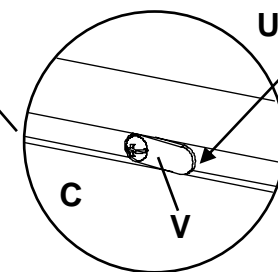


Fig. 2c

Unlocked

7401GDRC Northgate 3-Drawer Media Chest

Assembly Instructions

3. **Tipping restraint:** Locate two studs in the wall behind the unit. Attach a Clip (T1) to one wall stud with two #8 x 2" Black Screws (T3). See Figure 3a. Attach a second clip to the unit with two #8 x 1" Pan Head Screws (T4). See Figure 3b. Connect the two clips with the Nylon Restraint Strap (T2). Pull the Nylon Restraint Strap (T2) tight so there is no slack. See Figures 3c and 3d. Repeat this procedure to attach the second tipping restraint. If you cannot locate two studs, purchase the proper wall attachment hardware for your type of wall and secure the unit.

